


MANUAL FOR HEAT SHRINK TUBE


Article: 485-113

1. Slide the heat shrink tube to cover the connector and the rope light, such that the joint is in the middle of the shrink tube (image 1)
2. Heat the heat shrink tube all around, from a distance of about 10cm using a hair dryer (image 2).
Ensure that the heat shrink tube shrinks tightly around the rope light/connector.

1.

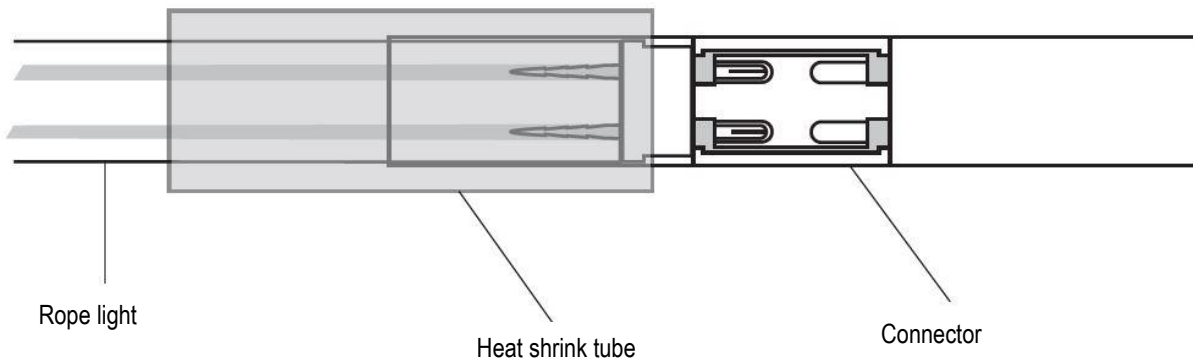

2.

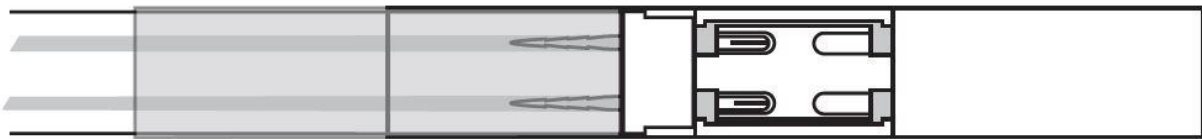

Imported by Tronix Lighting, Uden, The Netherlands

No part of this publication may be reproduced or published by means of photocopy, microfilm, any form of digital storage or in any other way without the prior written permission of the publisher.