



DISC SLIM


REF: K51700.SR



INSTALLATION INSTRUCTIONS



V.01

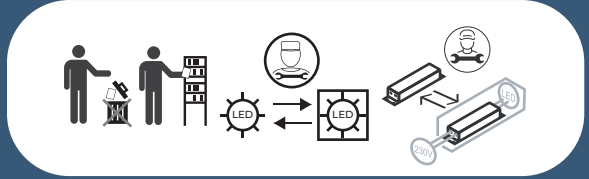

| ^K51700.01 | ^K51700.02 | ^K51700.03 | □K51700.04 | *K51700.05 | □K51700.06 | *K51700.07 |
|--|------------|------------|------------|------------|------------|------------|
| | | | | | | |
| <div style="display: flex; justify-content: space-between;"> <div style="width: 20%;"> <p>1</p> </div> <div style="width: 20%;"> <p>2</p> </div> <div style="width: 20%;"> <p>3</p> </div> </div> | | | | | | |
| <p>4 CONNECTION</p> <div style="display: flex; justify-content: space-around;"> <div> <p>ON-OFF</p> </div> <div> <p>PUSH1</p> </div> <div> <p>DALI</p> </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div> <p>1-10V</p> </div> <div> <p>PUSH2</p> </div> <div> <p>PHASE CUT</p> </div> </div> <p>*Models 05 and 07 don't work with PHASE CUT ^Models 01, 02 and 03 works with DIMMABLE REMOTE DRIVER □Model 04 and 06 works with PC REMOTE DRIVER</p> | | | | | | |
| <p>5</p> | | | | | | |
| <p>6</p> | | | | | | |
| <p>7</p> | | | | | | |